


QUICK START GUIDE

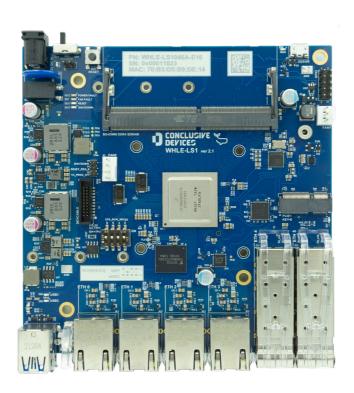

WHLE-LS1


High Performance Single Board Computer

NXP Layerscape® LS1 series SoC DDR4 SODIMM with ECC

Robust Connectivity: 4x 1 Gbit/s Ethernet, 2x 10 Gbit/s SFP+, 3x PCle SmartNIC features and over 45,000 CoreMark® performance M.2

HOW TO GET STARTED

- 1. Connect the 12V DC adapter to the Power (J9) barrel connector.
- Connect the USB micro B cable to the Debug (J7) connector or connect the DevCable¹ adapter to the Devcable (P1) header, and then the USB micro B cable to the DevCable adapter.
- 3. Turn on the device with the main power switch (SW3)

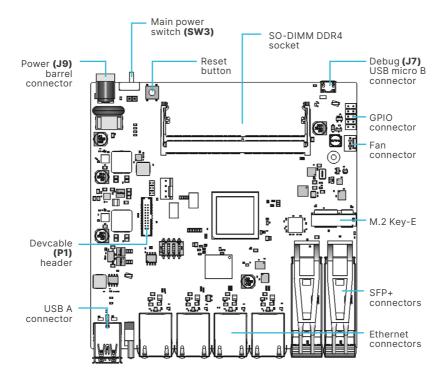

The WHLE-LS1 comes preprogrammed with Ubuntu.

Default serial console parameters: Speed 115200, Data 8 bits, no parity, 1 stop bit

Default login: root

Default password: ubuntu

VISIT PRODUCT WEBSITE

Scan this QR Code or use link below to access technical documentation and detailed product information

